 


eco Stage

CB-10 Led Beam

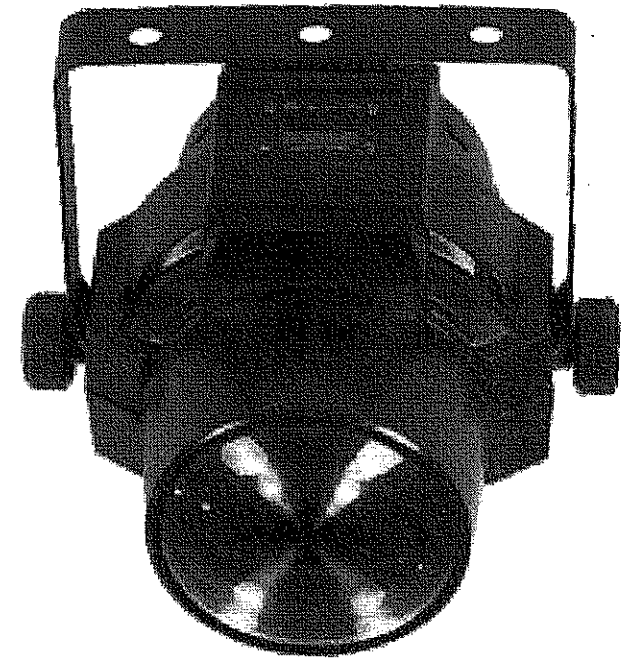

eco
stage

DANOR
eco DANOR Theatre and Studio Systems, 9 Hanagar st. Hod Hasharon, Israel

USER MANUAL

TABLE OF CONTENTS

Maintenance-----	1
Statement-----	1
Attention Item -----	2
Product introduction -----	2
4 Control Channel -----	3
Control Board -----	4

Maintenance

1. Please keep the light in dryness and avoiding use in wet place.
2. Using intermittently can be extended the life.
3. Attention to clean the fan and lens usually in order to get the ventilating effects and lighting effects better.
4. Please do not wipe the crust using organic menstruum for avoid to damage the product.

Statement

The product has well capability and intact packing when leave factory. All of the user should comply with above warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

Please forgive that we will not be notice for technical change.

Attention Item

1. For guarantee the life of product, please don't put it on the wet place and also not use it in the place over 40 degree.
2. Please don't lay the product on the unfixable or shakable place.
3. Ask for the professional to maintain the product in order to avoid the danger of get an electric shock.
4. Power supply should not be changed over $\pm 10\%$ while the light is using, it will be decreased the life of lamp if the power is too high, but it will be influenced the luminosity if the power is too low.
5. Please look round the manual for ensure the product can be used normally.

Product introduction

Power supply: AC100-240V, 60/50Hz

Power consumption: 35W

Light source: 10W white color LED

Control: DMX-512 4 channels

Color wheel: 7 colors + white, rainbow effect

Shutter: 0-20Hz

Dimmer: Variable electronic dimmer (0~100%)

Function: Built-in light effect program, can ran by sound without controller

Protection: High intellectual over-heat protection and anti-jamming circuit

4 Control Channel

Accept DMX512 control channel, detail as follow:

Channel	DMX-value	Feature
1 Dimmer	0~255	0~100% mechanic dimmer
2 Colour wheel	0~7	White
	8~15	Dark blue
	16~23	Yellow
	24~31	Pink
	32~39	Green
	40~47	Red
	48~55	Light Blue
	56~63	Orange
	64~71	White+Dark blue
	72~79	Dark blue+Yellow
	80~87	Yellow+Pink
	88~95	Pink+Green
	96~103	Green+Red
	104~111	Red+Ligh Blue
	112~119	Ligh Blue+Orange
120~127	Orange+White	
128~191	Positive rainbow effect with increasing speed	
192~255	Negative rainbow effect with increasing speed	
3 Shutter	0~3	Close
	4~7	Open
	8~215	Strobe effect with increasing speed
	216~255	Open
4 function	0~10	Reserved
	11~60	Blackout while color wheel moving
	61~110	Sound control
	111~160	Blackout while color wheel moving+Sound control
	161~210	Color disk reset
	211~255	All channel reset

Control Board

Password channel

Service Function. Press <MODE / ESE> at least 10 Second, press <UP> <DOWN> buttons, enter the password 2323 and goes into the item.

 
 
0128 Adjustment for Color wheel

4000 Adjustment for Starting brightness of the lamp

2315 Temperature protection set

Press the <UP> <DOWN> button repeatedly until you reach the desired adjustment, Press the <ENTER> button to confirmed. Confirmed. It will auto exit after 10 seconds.

DMX: **8001**

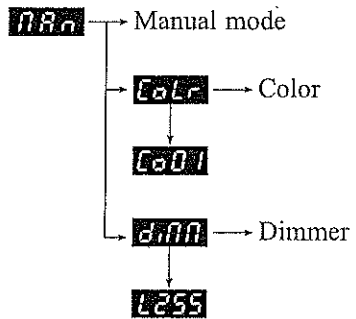

6000 → temperature display

2350 → System reset

4000 → Lode default